

























 













 


 






 





 
















 
Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Back / Return
	 Vol+
	 Shift + Picture / Format
	 Audio / Lang I/II

Original	Replacement
	 CH+ / Page+
	 Vol-
	 AV / Input / RDS
	 CH- / Page-
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Exit / Cancel / Clear
	 Display / Media
	 Picture / Format
	 Sound / Title
	 Sleep / Timer
	 Fav / Marker / PC
	 Shift + Down





Original	Replacement
 FAV +	 Shift + Up
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Lang	 Shift + Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Index / <<<	 <<< / Tune-
 Index / <<<	 Info / Angle
 Size / >>>	 >>> / Tune+
 Size / >>>	 Zoom / Size
 Reveal / I<<<	 I<<< / Preset-
 Subpage / >>>I	 >>>I / Preset+
 Subpage / >>>I	 Eject / Surround
 Rec	 Rec / Rec Mode
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Media	 Shift + Display / Media
 Red / TV/Radio	 TV/Radio /
 Red / TV/Radio	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

