
 

 








 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / R	 TV/Radio /
 Home	 D.Menu / Top
 FAV	 Fav / Marker / PC
 Back	 Back / Return
 Audio	 Audio / Lang I/II

Original	Replacement
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 Vol -	 Vol-
 P +	 Shift + CH+ /
 List	 Smart / List
 P -	 Shift + CH- /
 CH +	 CH+ / Page+
 USB	 Shift + 8
 Text	 Text / Goto





Original	Replacement	Original	Replacement
	CH -		CH- / Page-
	SUB		Subtitle / EQ
	Aspect		Picture / Format
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

