

 


 
 

 
 


 





 

 








Original	Replacement
 Power	 Power
 Recall	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV / Input	 AV
 -/--	 Shift + Guide
 EPG	 Guide
 P +	 Ch +
 P -	 Ch -

Original	Replacement
 Mute	 Mute
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol +	 Vol +
 Vol -	 Vol -
 LCD Menu	 Menu
 Exit / DVD Setup	 Exit
 Exit / DVD Setup	 Options
 D.Menu	 D. Menu
 D.Disp	 Shift + Info
 Red / Prog	 Red
 Green / Intro	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue





Original	Replacement
Title	Smart
Eject / PC Auto	+ Shift + Exit
<< / Index	<<
Play/Pause / Fav	Play
Play/Pause / Fav	Pre Ch
>> / Size	>>
Rec / S.Mode	Rec
Rec / S.Mode	Dual
Step >I / Fav +	+ Shift + Play
Step >I / Fav +	+ Shift + Up
Pause / P.Mode	Pause
Pause / P.Mode	+ Shift + Format
I<< / Text	I<<
I<< / Text	Text
Stop / Fav -	Stop
Stop / Fav -	+ Shift + Down
>>I / Hold	>>I

Original	Replacement
>>I / Hold	+ Shift + Stop
Reveal / Angle	Format
Subpage /	Eject
Lang / Audio	+ Shift + Dual
□ / Goto	TV/R
Subtitle	Subt
Info	Info

