



Original	Replacement
On	Power
Standby	Shift + Power
1 CD	1
Input Sel. V1	Shift + 1
2 CD	2
Input Sel. V2	Shift + 0
3 CD	3
Input Sel. V3	Shift + 3
4 CD	4
Input Sel. V4	Shift + 4
5 CD	5
Input Sel. Multi	Shift + Display / Media
6 CD	6
Input Sel. DVD	Shift + 2
7 CD	7
Input Sel. CD	Shift + 9
8 CD	8

Original	Replacement
Input Sel. Tape	Shift + 5
9 CD	9
Input Sel. Tuner	Shift + 6
+10 / -- / --- CD	Fav / Marker / PC
0 CD	0
Zone 2	Guide / EPG / -/-
Dimmer	Shift + Mute / Dimmer
Menu	Menu / Home
Sleep	Sleep / Timer
CH + / Disc +	CH+ / Page+
Up	Up
Vol +	Vol+
CH - / Disc -	CH- / Page-
Left	Left
Ener	OK
Right	Right
Vol -	Vol-





Original	Replacement	Original	Replacement
 Return / Exit	 Back / Return	 Stereo	 Audio / Lang I/II
 Return / Exit	 Shift + Back / Return	 Repeat CD	 Green / APP / Repeat
 Down	 Down	 Pure A	 Sound / Title
 Setup	 Setup / OPT /	 Direct	 D.Menu / Top
 Display	 Display / Media	 Test Tone	 Zoom / Size
 Muting	 Mute / Dimmer	 CH Sel	 Smart / List
 I<< CD	 I<< / Preset-	 Level -	 Shift + CH- /
 Play CD	 Play / Slow	 Level +	 Shift + CH+ /
 >>I CD	 >>I / Preset+	 Open / Close CD	 Eject / Surround
 << CD	 << / Tune-	 L. Night	 Shift + Sleep / Timer
 < DSP	 Shift + << /	 Cine FLTR	 Picture / Format
 Pause CD	 Pause / Step / Freeze		
 Stop CD	 Stop / Hold		
 >> CD	 >> / Tune+		
 DSP >	 Shift + >> /		
 SURR	 Exit / Cancel / Clear		
 All ST	 Text / Goto		

