 


 



 

 







 

 
 
 

 
 
 



 

 

 

















 












 




 










 
 

 










 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Play/Pause / Del	 Pause
 Mute	 Mute	 Play/Pause / Del	 Shift + Exit
 Red / A → Z	 Red	 Stop	 Stop
 Green / Lang	 Green	 <<	 <<
 Green / Lang	 Dual	 >>	 >>
 Yellow / S.Title	 Yellow	 List	 List
 Yellow / S.Title	 Subt	 Exit	 Exit
 Blue / A/Focus	 Blue	 Up	 Up
 Source	 AV	 Left	 Left
 Radio	 TV/R	 OK	 Ok
 Aspect	 Format	 Right	 Right
 Help / Hold	 Text	 Down	 Down
 Timer	 Shift + AV	 i+	 Info
 Rec	 Rec	 Back	 Back
 I<<	 I<<	 Vol +	 Vol +
 >>I	 >>I	 Vol -	 Vol -
 Play/Pause / Del	 Play	 Smart	 Smart





Original	Replacement	Original	Replacement
 Media	 Media		
 CH +	 Ch +		
 CH -	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Guide	 Guide		
 Menu	 Menu		

