


 



 








Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit
	Mute		Mute		Up/PR+		Up
	1		1		Down/PR-		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK/List		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		[+]		3D
	8		8		UHF		Smart
	9		9		↑		Ch +
	0		0		↓		Ch -
	Tv/Radio		TV/R		FAV		Pre Ch
	←PR		Back		PAL/NTSC		Format
	EPG		Guide		Red		Red
	Menu		Menu		Green		Green
	Info		Info		Yellow		Yellow





Original	Replacement	Original	Replacement
 Blue/Sound	 Blue		
 Audio	 Dual		
 TXT	 Text		
 [...]	 Subt		
 Pause	 Pause		
 Tv/AV	 AV		

