







Original	Replacement
A1	 1
A2	 2
 Off	 Power
 I<< CD	 I<< / Preset-
 >>I CD	 >>I / Preset+
 Play CD	 Play / Slow
 Pause CD	 Pause / Step / Freeze
 Stop/Clear CD	 Stop / Hold
 CD Play Mode	 3
 Band	 Sound / Title
 Preset Tune Down	 Down
 Preset Tune Up	 Up
 Tune-	 << / Tune-
 Tune+	 >> / Tune+
 XBS	 Display / Media
 S.Virtualizer	 Smart / List
 Sleep	 Sleep / Timer

Original	Replacement
 Volume-	 Vol-
 Volume+	 Vol+

