 




 

 


 
 



 

 
 
 

 

 

 

 




 

 
 





Original	Replacement	Original	Replacement
	Power		Mute / AD
	Input		Shift + Subt
	AV		Smart
	1		Ch +
	2		Ch -
	3		Back
	4		Exit
	5		Up
	6		Left
	7		Right
	8		Down
	9		>>
	0		<<
	List		Ok
	Info		Guide
	Vol +		3D
	Vol -		*/Settings
	Mute		Menu
			Red





Original	Replacement	Original	Replacement
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	T.Opt		Options
	Subt.		Subt

