

























 

 







 
 







	Original	Replacement		Original	Replacement
		Power		Power	
		Mute		Mute	
		Pic Size		Format	
		Pic Mode		Shift + Format	
		Sleep		Sleep	
		Dual I-II		Dual	
		S.Mode		Shift + Dual	
		Still		Pause	
		1		1	
		2		2	
		3		3	
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		0		0	
		-/--		Guide	
		PRE-CH		Pre Ch	
		S.Swap		I<<	
		PIP		Options	
		P.Input		>>	
		P.Position		>>I	
		P.Size		Subt	
		P.Swap		<<	
		TV		TV/R	
		PC/HDMI		Media	
		AV/Sel		Smart	
		Source		AV	
		Menu		Menu	
		Exit		Exit	
		TTX/On		Text	
		Mix		Shift + Text	





Original	Replacement
	
Up	Up
	
PR+	Ch +
	
Down	Down
	
PR-	Ch -
	
Right	Right
	
Vol+	Vol +
	
Left	Left
	
Vol-	Vol -
	
Enter	Ok
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Store	Shift + Smart
	
Flof/List	List
	
Hold	Stop
	
Cancel	Back

Original	Replacement
	
Index	Info
	
Time	Shift + AV
	
Size	Eject
	
Reveal	D. Menu

