




















 



























Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Tv/Sat	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtl	 Subtitle / EQ
 0	 0
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 TXT	 Text / Goto

Original	Replacement
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH/Page+	 CH+ / Page+
 Vol-	 Vol-
 CH/Page-	 CH- / Page-
 Red/SAT	 Red / Netflix / Search
 Red/SAT	 Shift + 0
 Green/Zoom	 Zoom / Size
 Green/Zoom	 Green / APP / Repeat
 Yellow/Pause	 Shift + Pause / Step /
 Yellow/Pause	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Blue/Tv/Radio	 Blue / Prime Video / Random		
 Blue/Tv/Radio	 TV/Radio /		
 Info	 Info / Angle		
 Audio	 Audio / Lang I/II		
 M-P	 Setup / OPT /		
 RCL	 D.Menu / Top		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Slow	 Shift + Slow Shift + Play /		
 Pause	 Pause / Step / Freeze		

