


 

 

 







 

 



 





 




















 



 


















Original	Replacement
 Power DVD	 Power
 Direct Tv Rec	 TV/R
 DVD	 Smart
 SD/PC	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 */Cancel	 Guide
 Input Select	 AV
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -
 ShowView	 Blue
 Manual Skip	 Subt
 I<< Skip	 I<<
 >>I Skip	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Direct Navigator/Top	 Menu
 Function	 Options
 Sub Menu	 D. Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right/II>	 Right





Original	Replacement
 <II/Left	 Left
 Enter	 Ok
 Prog/Check	 Sleep
 Display	 Info
 Status	 3D
 Time Slip	 Format
 Timer	 Shift + AV
 Erase	 Exit
 Rec Mode	 Shift + Rec
 Rec	 Rec
 A/Ext Link	 Red
 B	 Green
 C/Create Chapter	 Yellow
 Audio	 Dual
 Power Tv	 Shift + Power
 AV Tv	 Eject
 CH+ Tv	 Shift + Ch +

Original	Replacement
 CH- Tv	 Shift + Ch -
 Volume+ Tv	 Vol +
 Volume- Tv	 Vol -

