


 


 
 




 
 

 
 
 
 


 






 

 

 






 


 




 


 



 



 



 
 
 






Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Input	 AV	 6	 6
 Up	 Up	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Right	 Right	 0	 0
 Down	 Down	 Mute	 Mute
 TV	 TV/R	 Info	 Info
 Menu	 Menu	 Sleep	 Sleep
 Vol +	 Vol +	 Last	 Pre Ch
 Vol -	 Vol -	 Sound	 Dual
 CH +	 Ch +	 Hold	 Stop
 CH -	 Ch -	 [≡◇]	 Media
 1	 1	 Text / Mix	 Text
 2	 2	 □	 Options
 3	 3	 Index	 Smart
 4	 4	 [≡...]	 Subt





Original	Replacement	Original	Replacement
	 Size		 Format
	 Reveal		 D. Menu
	 Red		 Red
	 Green		 Green
	 Yellow		 Yellow
	 Blue		 Blue

