



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Original	Replacement
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit





Original		Replacement	
	[≡↕]		Eject
	[≡●]		TV/R
	[≡□]		Stop
	Pic Mode / [≡]		Format
	Sound Mode / [≡i]		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II		Shift + Dual

Original		Replacement	





Original	Replacement	Original	Replacement
Power	Power	Menu	Ok
1	1	<< FR / Slow	<<
2	2	Play	Play
3	3	>> FF / Slow	>>
4	4	Stop	Stop
5	5	I<< Prev	I<<
6	6	Open / Close	Eject
7	7	>>I Next	>>I
8	8	Pause	Pause
9	9		
0	0		
TV / Input	AV		
Up / PR +	Up		
Up / PR +	Ch +		
Down / PR -	Down		
Down / PR -	Ch -		
Menu	Menu		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Menu	 Ok
 Down / PR -	 Ch -
 Menu	 Menu

Original	Replacement
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue / I-II	 Blue
 Blue / I-II	 Dual

