
 
 



 



















































 













Original		Replacement		Original		Replacement	
	Power		Power		V.Menu		D.Menu / Top
	Input		AV / Input / RDS		Menu		Menu / Home
	Display		Display / Media		Vol -		Vol-
	P.STD		Picture / Format		P +		CH+ / Page+
	Mute		Mute / Dimmer		Vol +		Vol+
	1		1		P -		CH- / Page-
	2		2		<< REW		<< / Tune-
	3		3		Stop		Stop / Hold
	4		4		Play		Play / Slow
	5		5		>> FF		>> / Tune+
	6		6		Rec		Rec / Rec Mode
	7		7		Eject		Eject / Surround
	8		8		Pause / P/S		Pause / Step / Freeze
	9		9		Crystal PB		Smart / List
	-/--		Guide / EPG / -/--		TRK Up		>>  / Preset+
	0		0		TRK Up		Up
	Pre-CH		Back / Return		Index		Info / Angle





Original	Replacement
Memory	OK
Sleep	Sleep / Timer
TRK Down	Down
TRK Down	I<< / Preset-
Lang Sel	Audio / Lang I/II
Clear	Exit / Cancel / Clear

Original	Replacement

