


 

 

 
 



 
 










 

 


 





 



 

 

 

 
 
 

 



 

 









 






Original	Replacement	Original	Replacement
	Power		Power
	Picture		Format
	J/Sound		Dual
	Set Up		Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[+]		Info
	Tv/AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡♦]/FP		TV/R
	[≡i]/Index		Smart
	[≡+]/Hold/Still		Options
	Tv/Text		Text
	Direct Tv Rec		Rec
	OIO		List
	Aspect		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





	Original	Replacement		Original	Replacement
		9		9	
VCR		0/VCR		0	
		C		Pre Ch	
		-/--		Guide	
		Play		Play	
		Stop		Stop	
		>>		>>	
		<<		<<	

	Original	Replacement
















 




Original	Replacement	Original	Replacement
 Power	 Power		
 N	 Options		
 Programme+	 Ch +		
 Programme-	 Ch -		
 STR	 Smart		
 ?/Help	 Media		





Original		Replacement		Original		Replacement	
	Power		Power				
	Rec		Rec				
	II/I>		Pause				
	Programme-		Ch -				
	Programme+		Ch +				
	?/Help		Media				
	STR		Smart				
	N		Options				

