
 

 


 
 
 



 

 


 

 
 
 

 


 




Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





Original	Replacement	Original	Replacement
 REVEAL	 Media		
 HOLD	 Dual		
 MIX	 Shift + Media		
 RED	 Red		
 GREEN	 Green		
 YELLOW	 Yellow		
 CYAN	 Blue		
 NICAM	 Smart		
 P.Mode	 Shift + Format		
 S.Mode	 Shift + Dual		
 OK	 Ok		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		

