



 

 



 

 





 



 

 

 





 





 



 

 
 






 





 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Aspect		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio / Nicam		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Exit		Exit / Cancel / Clear
	CH +		CH+ / Page+
	Vol -		Vol-
	Shift + Guide / EPG / -/--		Shift + Guide / EPG / -/--
	Back / Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Source		AV / Input / RDS



