 






 



 




 

 




 
 















 

 

 









 





 











Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 i	 ANGLE INFO	 RETURN	 RETURN BACK
 INPUT SELECT	 RDS AV INPUT		 Left
 PICTURE SIZE	 FORMAT PICTURE	 ENTER/ CH LIST	 SHIFT + OK
 1	 1	 ENTER/ CH LIST	 OK
 2	 2		 Right
 3	 3		 DIMMER MUTE
 4	 4		 Down
 5	 5		 SUBTITLE
 6	 6		 VOL+
 7	 7		 STEP-FREEZE
 8	 8		 CH PAGE
 9	 9		 VOL-
 AUDIO I/II	 LANG I/II AUDIO		 SHIFT + RETURN BACK
 0	 0		 CH PAGE
 GUIDE EPG	 GUIDE EPG		 GOTO TEXT
 MENU	 HOME MENU		 SHIFT + ANGLE INFO





Original	Replacement	Original	Replacement
	[≡⇅]		
	TV		
	Play / Pause		
	Play / Pause		
	Stop		
	USB		
	Rec		
	I<< / Red		
	I<< / Red		
	<< / Green		
	<< / Green		
	>> / Yellow		
	>> / Yellow		
	>>I / Blue		
	>>I / Blue		

