



Original	Replacement	Original	Replacement
	Power		Mute / Dimmer
	1		CH- / Page-
	2		Menu / Home
	3		Exit / Cancel / Clear
	4		Up
	5		Left
	6		OK
	7		Right
	8		Guide / EPG / -/-
	9		Down
	Recall		Tv/FAV/Radio/Set
	0		Tv/FAV/Radio/Set
	Source		Red / Netflix / Search
	Vol+		Green / APP / Repeat
	A/D/Content Menu		Yellow / YouTube / Repeat
	P+		Blue / Prime Video / Random
	Vol-		Picture / Format











 

 

 



 











 























 




 












Original	Replacement	Original	Replacement
	Power		Up
	1		Left
	2		OK
	3		Right
	4		Guide/Top
	5		Down
	6		Tv/FAV/Radio/Set
	7		[<>]
	8		<[]>
	9		[i+]/[≡i]
	0		Text
	Source		Text
	Vol+		Audio / Lang I/II
	Vol-		Subtitle
	Mute		Eject
	Menu/DVD		Eject / Surround
	Exit/Return		O/I/II
			Stop
			Play/[≡o]
			Stop / Hold
			Play / Slow
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random



