






 











 

 





 










Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 PRE-CH	 Pre Ch
 TV	 TV/R
 CH.MGR	 Smart
 Wiselink	 Media

Original	Replacement
 Stop	 Stop
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P-	 Ch -
 P+	 Ch +
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok










 



 
 
 



 













 

 

 
















Original	Replacement
[=?]/Info	Info
[=+]/PIP	3D
TTX/MIX	Text
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
I-II/Dual	Dual
(O)/SRS	Back
Source (Green)	Shift + AV
PC	List
[▼]/STTL	Subt
[<>]/Size	Format
[=◆]/P.Mode	Shift + Format
[=]/S.Mode	Options
Sleep	Sleep
Power Cable	Shift + Power

Original	Replacement
1 Cable	Shift + 1
2 Cable	Shift + 2
3 Cable	Shift + 3
4 Cable	Shift + 4
5 Cable	Shift + 5
6 Cable	Shift + 6
7 Cable	Shift + 7
8 Cable	Shift + 8
9 Cable	Shift + 9
0 Cable	Shift + 0
P+ Cable	Shift + Ch +
P- Cable	Shift + Ch -








 



 





 









 



 





 



 

 



 

 

 














Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Enter	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 [≡?]/Info	 Info
 8	 8		
 9	 9		
 0	 0		
 TV	 TV/R		
 <<	 <<		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		





Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 >>	 >>
 4	 4	 Menu	 Menu
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 PRE-CH	 Pre Ch	 [≡?]/Info	 Info
 TV	 TV/R	 [<>]/Size	 Format
 Sleep	 Sleep	 Source	 AV
 P+	 Ch +		
 P-	 Ch -		
 <<	 <<		





Original	Replacement	Original	Replacement
Power	Power	P+	Ch +
1	1	P-	Ch -
2	2	Up	Up
3	3	Enter	Ok
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	Menu	Menu
8	8	Exit	Exit
9	9	[≡?]/Info	Info
0	0		
TV	TV/R		
<<	<<		
Stop	Stop		
Play	Play		
Pause	Pause		
>>	>>		

Original	Replacement	Original	Replacement
P+	Ch +	P-	Ch -
Up	Up	Down	Down
Enter	Ok	Right	Right
Down	Down	Left	Left
Menu	Menu	Exit	Exit
[≡?]/Info	Info		

