



 

 


 

 

 







 

 




 

 



 



 


 







 











| Original | Replacement |
|--|---|
|  D.Menu |  D.Menu / Top |
|  Power |  Power |
|  Open / Close |  Eject / Surround |
|  Info |  Info / Angle |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |
|  Audio I/II |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  CH. List |  Smart / List |
|  Screen |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |

| Original | Replacement |
|--|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Source |  AV / Input / RDS |
|  0 |  0 |
|  Q.View |  Shift + Menu / |
|  Mute |  Mute / Dimmer |
|  Guide |  Guide / EPG / -/- |
|  Vol + |  Vol+ |
|  P+ |  CH+ / Page+ |
|  Vol - |  Vol- |
|  P - |  CH- / Page- |
|  Menu |  Menu / Home |
|  FAV |  Fav / Marker / PC |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |





| Original | Replacement | Original | Replacement |
|--|-----------------------|--|---------------------------------------|
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Record |  | Rec / Rec Mode |
|  | [X] / Repeat |  | Back / Return |
|  | ▶ / Index |  | Play / Slow |
|  | ⏸ Pause |  | Pause / Step / Freeze |
|  | ■ Stop |  | Stop / Hold |
|  | Red / ◀◀ / REV |  | Shift + Red / Netflix / Search |
|  | Red / ◀◀ / REV |  | Red / Netflix / Search |
|  | Green / ▶▶ / FWD |  | Shift + Green / APP / Repeat |
|  | Green / ▶▶ / FWD |  | Green / APP / Repeat |
|  | Yellow / ◀◀◀ / Prev |  | Shift + Yellow / YouTube / Repeat A-B |
|  | Yellow / ◀◀◀ / Prev |  | Yellow / YouTube / Repeat |
|  | Blue / ▶▶▶ / Next |  | Blue / Prime Video / Random |
|  | Blue / ▶▶▶ / Next |  | Shift + Blue / Prime |
|  | [≡] / Setup |  | Setup / OPT / |
|  | [≡] / Setup |  | Shift + Setup / OPT / Tools |
|  | [≡] / Title |  | Shift + Sound / Title |
|  | [...] / Search |  | Text / Goto |
|  | [...] / Search |  | Shift + Text / |
|  | [□] / 10+ |  | Shift + 9 |
|  | [□] / 10+ |  | Shift + 0 |
|  | [?] / Program |  | Shift + Guide / EPG / -/- |
|  | [♦] / A-B |  | Shift + Fav / Marker / PC |
|  | ⊙ / Angle / Rec. List |  | Shift + TV/Radio / Program |
|  | ⊙ / Angle / Rec. List |  | Shift + Sleep / Timer |
|  | D.Call |  | Shift + D.Menu / Top Menu |

