






Original	Replacement	Original	Replacement
 Power	 Power	 Yellow / PMode	 Format
 Mute	 Mute	 Yellow / PMode	 Shift + Yellow
 AUTO	 Smart	 Blue / SMode	 Shift + Dual
 PIP	 Shift + Smart	 Blue / SMode	 Shift + Blue
 Exit	 Exit	 Up	 Up
 Go To / Text	 Text	 Left	 Left
 Audio I/II	 Dual	 Enter	 Ok
 Display	 Info	 Right	 Right
 Sleep	 Sleep	 Down	 Down
 P+	 Ch +	 1	 1
 P-	 Ch -	 2	 2
 V+	 Vol +	 3	 3
 V-	 Vol -	 4	 4
 Red / Input	 AV	 5	 5
 Red / Input	 Shift + Red	 6	 6
 Green / TV	 Menu	 7	 7
 Green / TV	 Shift + Green	 8	 8



Menu



Original		Replacement		Original		Replacement	
	9		9		I<< / Subpage		I<<
	0		0		>>I / Lang		>>I
	-/-- / +10	 + 	Shift + Guide		Stop / FAV -		Stop
	Recall / Prog		Back		Stop / FAV -	 + 	Shift + Left
	Red / D.Setup		Red		<< / FAV		<<
	Red / D.Setup		Options		<< / FAV		Pre Ch
	Green / A-B		Green		>> / FAV+		>>
	Yellow / Angle		Yellow		>> / FAV+	 + 	Shift + Right
	Blue / Repeat		Blue		Eject / EPG		Eject
	Blue / Repeat	 + 	Shift + Text		Eject / EPG		Guide
	Subtitle		Subt		Media		Media
	Pause/Play / Hold		Play		Recorder		Rec
	Pause/Play / Hold		Pause		CH.List		List
	Size		3D		TV / Radio		TV/R
	D.Menu / Mix		D. Menu				
	D.Disp / Reveal	 + 	Shift + Info				
	Zoom / TXT Index	 + 	Shift + Eject				

