


 



 
 
 
 

 

 
 

 

 

 

 


Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject
	Function		Guide
	[I]/PLII/S.Vol		Dual
	Mute		Mute
	DSP/EQ		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Disc Menu		D. Menu
	Home		Smart
	Title Menu		Menu
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up/Tuning Up		Up
	Down/Tuning		Down



Down



Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Red/Audio Upscale/P. Bass	 Red		
 Green/S/W/Leve	 Green		
 Yellow/Giga	 Yellow		
 Blue/MO/ST	 Blue		
 USB Rec	 Rec		
 Dimmer	 3D		
 Repeat	 Text		
 Tuner Memory	 Subt		

