

































 





































Original	Replacement	Original	Replacement
 Standby / On	 Power	 >>	 >>  / Preset+
 Open / Close	 Eject / Surround	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play / Pause	 Play / Slow
 3	 3	 Play / Pause	 Pause / Step / Freeze
 4	 4	 >>	 >> / Tune+
 5	 5	 Repeat	 Shift + Green / APP / REPEAT
 6	 6	 Menu	 Menu / Home
 7	 7	 Return	 Back / Return
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 TV / DVD	 AV / Input / RDS	 OK	 OK
 0	 0	 Right	 Right
 TV / Radio	 TV/Radio /	 Down	 Down
 I<<	 I<< / Preset-	 Title List / Disc Menu	 D.Menu / Top
 Copy	 Setup / OPT /	 Info	 Info / Angle
 Timer	 Sleep / Timer	 Cancel	 Exit / Cancel / Clear



