



| Original | Replacement      |
|----------|------------------|
| On       | Power            |
| Off      | Shift + Power    |
| Mute     | Mute / Dimmer    |
| AVR      | AV / Input / RDS |
| DVD      | Shift + 2        |
| CD       | Shift + 3        |
| Tape     | Shift + 5        |
| VID1/VCR | Shift + 4        |
| VID2/TV  | Shift + 1        |
| CBL/SAT  | Shift + 0        |
| AM/FM    | Shift + 6        |
| Sleep    | Sleep / Timer    |
| Test     | TV/Radio /       |
| Vol+     | Vol+             |
| Surr.    | Eject / Surround |
| Night    | Zoom / Size      |
| [=]      | Text / Goto      |

| Original     | Replacement      |
|--------------|------------------|
| Vol-         | Vol-             |
| CH./[=?]     | Picture / Format |
| SPKR/Menu    | Menu / Home      |
| Up           | Up               |
| Left         | Left             |
| Set          | OK               |
| Right        | Right            |
| Digital/[≡X] | Setup / OPT /    |
| Down         | Down             |
| Delay/Normal | Sound / Title    |
| 1            | 1                |
| 2            | 2                |
| 3            | 3                |
| 4            | 4                |
| 5            | 5                |
| 6            | 6                |
| 7            | 7                |





| Original     | Replacement                 |
|--------------|-----------------------------|
| 8            | 8                           |
| Tun-M/[≡+]   | Smart / List                |
| 9            | 9                           |
| 0            | 0                           |
| Mem/[≡◆]     | D.Menu / Top                |
| Tuning ▲     | >> / Tune+                  |
| Red          | Red / Netflix / Search      |
| Direct/Green | Green / APP / Repeat        |
| Clear/Yellow | Yellow / YouTube / Repeat   |
| Preset ▲     | >>  / Preset+               |
| Blue         | Blue / Prime Video / Random |
| Tuning ▼     | << / Tune-                  |
| RDS/D.Skip   | Display / Media             |
| Preset ▼     | << / Preset-                |
| << DVD       | Shift + << /                |
| > DVD        | Shift + Play /              |
| >> DVD       | Shift + >> /                |



 



 







 



 

 

 

 





 

 

 











 



 



 



 

 



 



Tune+

| Original      | Replacement            |
|---------------|------------------------|
| Stop DVD      | Shift + Stop /         |
| Pause DVD     | Shift + Pause / Step / |
| I<</Skip Down | Shift + I<< / Preset-  |
| Skip Up/>>I   | Shift + >>I / Preset+  |







| Original  |              | Replacement   |                  | Original  |            | Replacement   |                       |
|---|--------------|---|------------------|---|------------|---|-----------------------|
|    | Power On     |    | Power            |    | 3          |    | 3                     |
|    | Power Off    |    | Shift + Power    |    | 4          |    | 4                     |
|    | Vol+         |    | Vol+             |    | 5          |    | 5                     |
|    | Night        |    | Zoom / Size      |    | 6          |    | 6                     |
|    | [≡]          |    | Text / Goto      |    | 7          |    | 7                     |
|    | Vol-         |    | Vol-             |    | 8          |    | 8                     |
|    | CH./[≡?]     |    | Picture / Format |    | Tun-M/[≡+] |    | Smart / List          |
|    | SPKR/Menu    |    | Menu / Home      |    | 9          |    | 9                     |
|    | Up           |    | Up               |    | 0          |    | 0                     |
|    | Left         |    | Left             |    | Mem/[≡◇]   |    | D.Menu / Top          |
|   | Set          |   | OK               |   | Direct     |   | Green / APP / Repeat  |
|  | Right        |  | Right            |  | Clear      |  | Exit / Cancel / Clear |
|  | Digital/[≡X] |  | Setup / OPT /    |  | Preset ▲   |  | CH+ / Page+           |
|  | Down         |  | Down             |  | Preset ▲   |  | Shift + >>1 / Preset+ |
|  | Delay/Normal |  | Sound / Title    |  | RDS/D.Skip |  | Display / Media       |
|  | 1            |  | 1                |  | Preset ▼   |  | CH- / Page-           |
|  | 2            |  | 2                |  | Preset ▼   |  | Shift + I<< / Preset- |









| Original  |                | Replacement   |                  | Original  |            | Replacement   |                               |
|---|----------------|---|------------------|---|------------|---|-------------------------------|
|    | Power On       |    | Power            |    | 4 VCR      |    | Shift + 4                     |
|    | Power (On/Off) |    | Mute / Dimmer    |    | 5          |    | 5                             |
|    | Power Off      |    | Shift + Power    |    | 5 VCR      |    | Shift + 5                     |
|    | PR+ VCR        |    | CH+ / Page+      |    | 6          |    | 6                             |
|    | Input VCR      |    | AV / Input / RDS |    | 6 VCR      |    | Shift + 6                     |
|    | Vol+ VCR       |    | Vol+             |    | 7          |    | 7                             |
|    | PR- VCR        |    | CH- / Page-      |    | 7 VCR      |    | Shift + 7                     |
|    | Vol- VCR       |    | Vol-             |    | 8          |    | 8                             |
|    | SPKR/Menu      |    | Menu / Home      |    | 8 VCR      |    | Shift + 8                     |
|    | Delay/Normal   |    | Sound / Title    |    | Tun-M/[≡+] |    | Smart / List                  |
|  | 1              |  | 1                |  | 9          |  | 9                             |
|  | 1 VCR          |  | Shift + 1        |  | 9 VCR      |  | Shift + 9                     |
|  | 2              |  | 2                |  | 0          |  | 0                             |
|  | 2 VCR          |  | Shift + 2        |  | 0 VCR      |  | Shift + 0                     |
|  | 3              |  | 3                |  | Mem/[≡♦]   |  | D.Menu / Top                  |
|  | 3 VCR          |  | Shift + 3        |  | Direct     |  | Green / APP / Repeat          |
|  | 4              |  | 4                |  | Clear VCR  |  | Shift + Exit / Cancel / Clear |







