



Original	Replacement	Original	Replacement
DVD Power	Power	<<	<<
1	1	>>	>>
2	2	Stop	Stop
3	3	Play / Pause	Play
4	4	Play / Pause	Pause
5	5	I<<	I<<
6	6	>>I	>>I
7	7	Return	Back
8	8	Step	Shift + Pause
9	9	Clear	Shift + Exit
0	0	Top Menu	Shift + Menu
Open / Close	Exit	Top Menu	D. Menu
Setup	Options	Display	Info
Zoom	Eject	Menu	Menu
3D Sound	3D	Up	Up
Bookmark	Pre Ch	Left	Left
Volume Con.	Guide	Enter	Ok





Original	Replacement
 Right	 Right
 Down	 Down
 Audio	 Dual
 Sub Title	 Subt
 Angle	 Format
 Repeat	 Text
 Repeat A-B	 Shift + Text

Original	Replacement

