


Original	Replacement	Original	Replacement
	TV Direct		Smart / List
	Power DVD		Red / Netflix / Search
	Power VCR		Green / APP / Repeat
	Power Audio		Power
	Power STB		Yellow / YouTube / Repeat
	Power TV		Blue / Prime Video / Random
	DVD		2
	VCR		4
	TV		1
	FM/AM		6
	Tv/Video		5
	Muting		Mute / Dimmer
	Channel+		CH+ / Page+
	Volume+		Vol+
	Channel-		CH- / Page-
	Volume-		Vol-
	Display/On		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	Analog/Digital Input		AV / Input / RDS
	Smart S Setup		Setup / OPT /
	Bass Boost		Audio / Lang I/II
	C. Tone		Subtitle / EQ
	A. Position		D.Menu / Top
	Test Tone		Text / Goto
	Effect		Info / Angle
	Decode		TV/Radio /
	Surround		Eject / Surround
	Subwfr+		Right
	Center+		Up
	Surr L+		Shift + Vol+
	Surr R+		Shift + CH+ /
	Subwfr-		Left
	Center-		Down

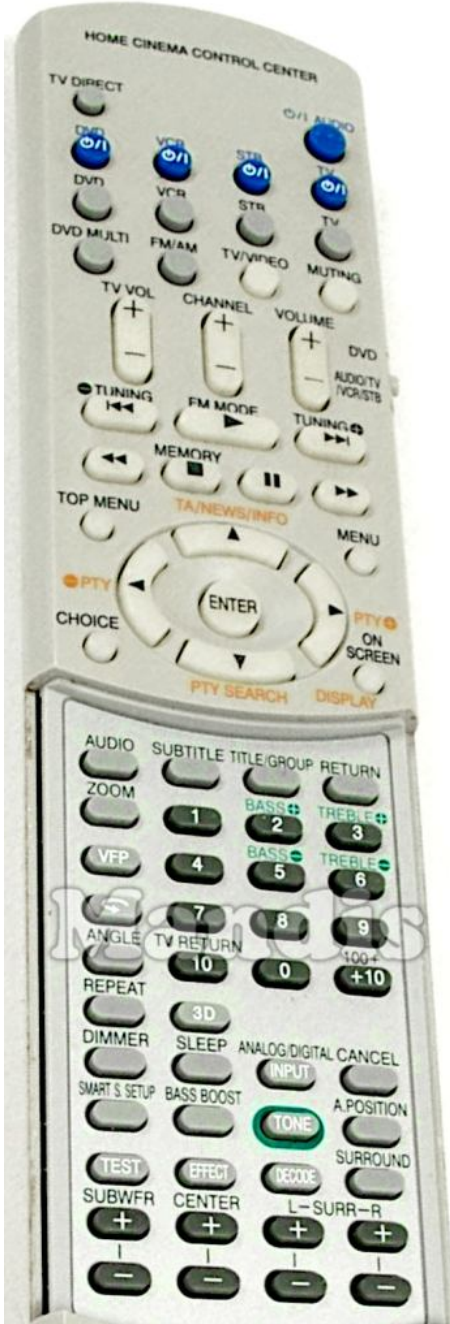

Screen






Original	Replacement
Power Audio	Power
Power Tv	Shift + Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
Tuning- FM/AM	<< / Tune-
FM Mode FM/AM	Smart / List
Tuning+ FM/AM	>> / Tune+
Memory FM/AM	Menu / Home
TA/News/Info	Info / Angle
TA/News/Info	Up
PTY- FM/AM	Left
PTY+ FM/AM	Right
PTY Search	Down
PTY Search	Red / Netflix / Search

Original	Replacement
Display FM/AM	Display / Media
1 FM/AM	Shift + 1
1 TV	1
2 FM/AM	Shift + 2
2 TV	2
3 FM/AM	Shift + 3
3 TV	3
4 FM/AM	Shift + 4
4 TV	4
5 FM/AM	Shift + 5
5 TV	5
6 FM/AM	Shift + 6
6 TV	6
7 FM/AM	Shift + 7
7 TV	7
8 FM/AM	Shift + 8
8 TV	8



FM/AM



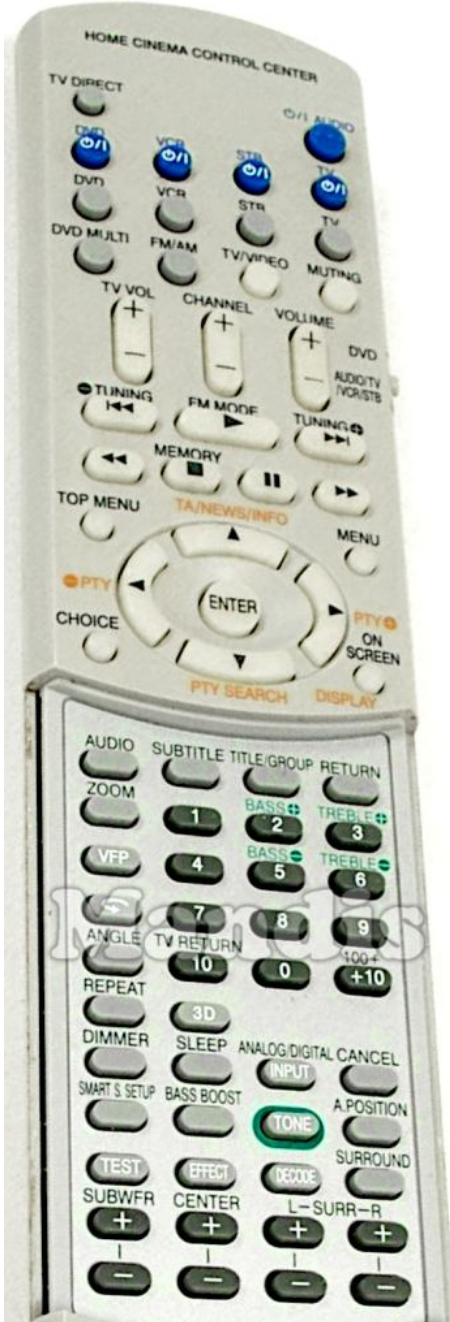


Original	Replacement
Power DVD	Power
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Top Menu	D.Menu / Top
>>	>> / Tune+
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Set Up	Setup / OPT /
Down	Down
On Screen	Shift + Display / Media

Original	Replacement
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Title Group	Shift + Sound / Title
Return	Back / Return
DVD Zoom	Zoom / Size
1	1
2	2
3	3
VFP Progressive	Smart / List
4	4
5	5
6	6
←	Left
7	7
8	8
9	9
Angle	Info / Angle





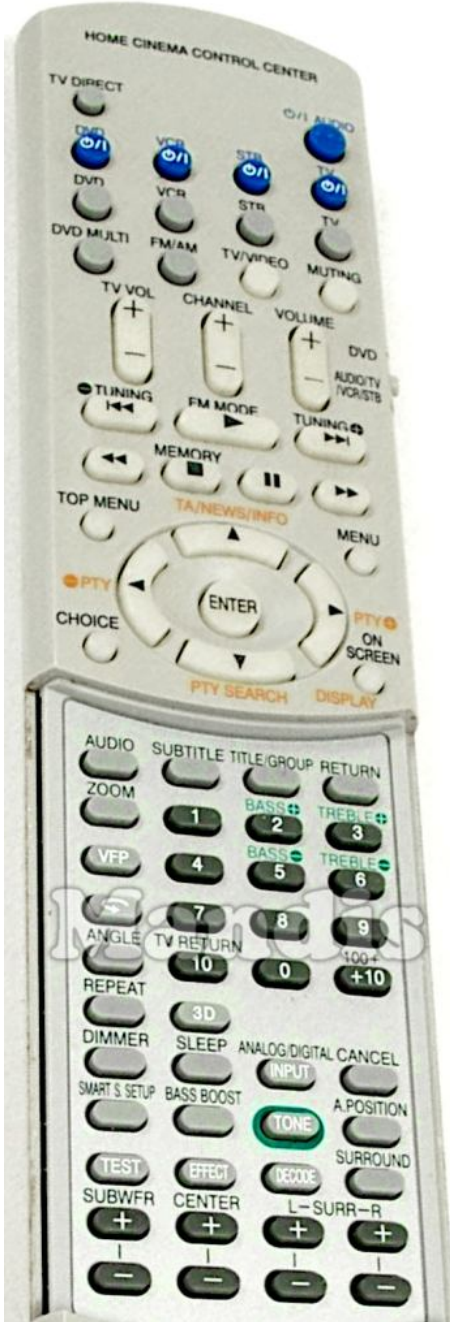

Original	Replacement	Original	Replacement
Power VCR	Shift + Power	3 VCR	Shift + 3
Power STB	Power	3 STB	3
VCR	Shift + Guide / EPG / -/-	4 VCR	Shift + 4
Muting	Mute / Dimmer	4 STB	4
Channel+	CH+ / Page+	5 VCR	Shift + 5
Volume+	Vol+	5 STB	5
Channel-	CH- / Page-	6 VCR	Shift + 6
Volume-	Vol-	6 STB	6
Play VCR	Play / Slow	7 VCR	Shift + 7
<< VCR	<< / Tune-	7 STB	7
Stop/Memory	Stop / Hold	8 VCR	Shift + 8
Pause VCR	Pause / Step / Freeze	8 STB	8
>> VCR	>> / Tune+	9 VCR	Shift + 9
1 VCR	Shift + 1	9 STB	9
1 STB	1	+10 TV	Guide / EPG / -/-
2 VCR	Shift + 2	0 VCR	Shift + 0
2 STB	2	0 STB	0

