









 

 
 
 

















 

 
 
 
 
 

 

 
 
 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		I<<		I<<
	Mute		Mute		>>I		>>I
	Red		Red		Menu		Menu
	Green		Green		FAV		Pre Ch
	Yellow		Yellow		Up / PR+		Up
	Blue		Blue		Down / PR-		Down
	Text		Text		Right / Vol+		Right
	Zoom		Eject		Left / Vol-		Left
	Subt		Subt		OK / List		Ok
	Audio		Dual		OK / List		List
	Rec		Rec		Exit		Exit
	--		Shift + Guide		EPG		Guide
	Stop		Stop		Vol+		Vol +
	Play / Pause		Play		Vol-		Vol -
	Play / Pause		Pause		Info		Info
	<<		<<		Media		Media
	>>		>>		Page+		Ch +





Original	Replacement	Original	Replacement
	Page-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	TV / Radio		TV/R

