















 



















 





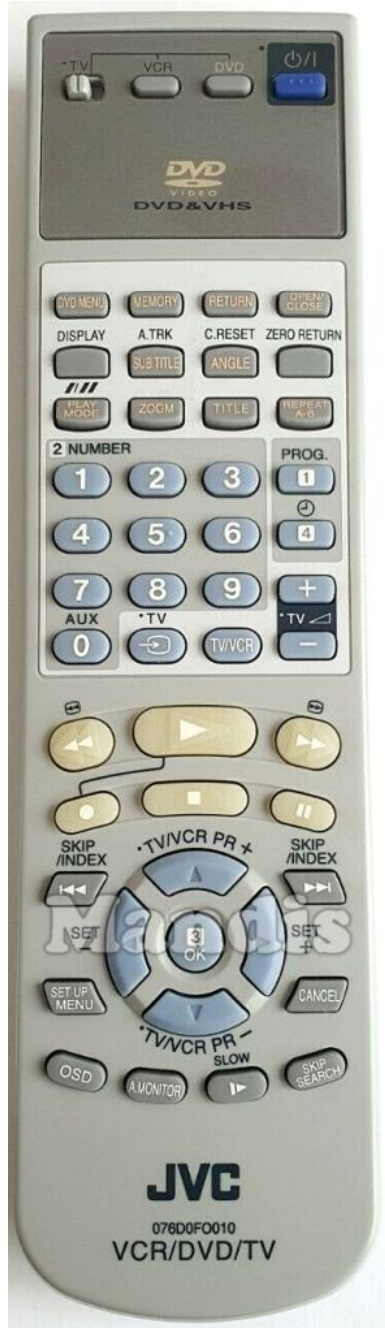 














 



 








 




| Original | Replacement |
|---|---|
|  VCR |  Shift + 4 |
|  DVD |  Shift + 2 |
|  Power |  Power |
|  DVD Menu |  D.Menu / Top |
|  Memory |  Text / Goto |
|  Return |  Back / Return |
|  Open/Close |  Eject / Surround |
|  Display |  Shift + Display / Media |
|  Subtitle |  Subtitle / EQ |
|  Angle |  Info / Angle |
|  Zero Return |  Shift + Back / Return |
|  Play Mode |  Smart / List |
|  Zoom |  Zoom / Size |
|  Title |  Sound / Title |
|  Repeat A-B |  Yellow / YouTube / Repeat |
|  1 |  1 |
|  2 |  2 |

| Original | Replacement |
|---|--|
|  3 |  3 |
|  [1]/Prog. |  TV/Radio / |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  [4]/Timer |  Sleep / Timer |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Tv Vol+ |  Vol+ |
|  0/AUX |  Shift + 7 |
|  0/AUX |  0 |
|  Tv/VCR |  AV / Input / RDS |
|  Tv Vol- |  Vol- |
|  <</[<<] |  << / Tune- |
|  Play |  Play / Slow |
|  >>/[>>] |  >> / Tune+ |





| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|------------------------|----------|--|-------------|--|
|  | Stop |  | Stop / Hold | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | I<< Skip/Index |  | I<< / Preset- | | | | |
|  | Up |  | Up | | | | |
|  | >>I Skip/Index |  | >>I / Preset+ | | | | |
|  | Left |  | Left | | | | |
|  | OK |  | OK | | | | |
|  | Right |  | Right | | | | |
|  | Set Up Menu |  | Setup / OPT / | | | | |
|  | Down |  | Down | | | | |
|  | Cancel |  | Exit / Cancel / Clear | | | | |
|  | OSD |  | Display / Media | | | | |
|  | A. Monitor |  | Menu / Home | | | | |
|  | I> Slow |  | Shift + Play / | | | | |
|  | Skip Search |  | Red / Netflix / Search | | | | |
| | | | | | | | |
| | | | | | | | |

