



Original	Replacement	Original	Replacement
 Power	 Power	 System Menu	 Menu
 Theatre	 Smart	 1	 1
 One-Touch Play	 Shift + Play	 2	 2
 Sleep	 Sleep	 3	 3
 S-Air Mode	 Red	 4	 4
 TV Input	 AV	 5	 5
 Picture Navi	 Media	 6	 6
 Dimmer	 Shift + Mute	 7	 7
 Display	 Info	 8	 8
 Function+	 Ch +	 9	 9
 Function-	 Ch -	 0	 0
 Audio	 Dual	 Clear	 Exit
 Subtitle /	 Subt	 Folder-	 Shift + Ch -
 Angle / Memory Select	 Format	 Folder+	 Shift + Ch +
 Sound Mode	 Shift + Dual	 DVD Menu	 D. Menu
 Dynamic Bass	 Green	 DVD Top Menu	 Shift + Menu
 Night	 Yellow	 Muting	 Mute




 







 
 





	Original	Replacement	Original	Replacement
	Volume+	Vol +		Pause
	Volume-	Vol -		Stop
	Up	Up		
	Left	Left		
	OK	Ok		
	Right	Right		
	Down	Down		
	Return	Back		
	Display / Tools	+ Shift + Info		
	Display / Tools	Options		
	I<< / Preset-	I<<		
	>>I / Preset+	>>I		
	◀• Replay / <II Step	+ Shift + Left		
	•➔ Advance / Step II>	+ Shift + Right		
	<< / Tuning- / <I Slow	<<		
	>> / Tuning+ / Slow I>	>>		
	Play	Play		





Original	Replacement	Original	Replacement
 TV Power	 Power	 Prog-	 Ch -
 Menu	 Menu		
 TV Enter	 Ok		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 Guide		
 Volume+	 Vol +		
 Volume-	 Vol -		
 Prog+	 Ch +		

