











 





























Original	Replacement
 TV	 Shift + 1
 AV.SV	 AV / Input / RDS
 SCART1	 Shift + 3
 PC	 Shift + Fav / Marker / PC
 SCART2	 Shift + 2
 Mute	 Mute / Dimmer
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu / Enter	 OK
 Menu / Enter	 Menu / Home
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / P-	 Down
 Down / P-	 CH- / Page-

Original	Replacement
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/-
 0	 0
 RTN	 Back / Return





Original	Replacement
 RTN	 Fav / Marker / PC
 Sound	 Sound / Title
 PIP Source Up	 +  Shift + Up
 Display	 Display / Media
 PIP Position	 +  Shift + Left
 PIP On/Off	 +  Shift + OK
 PIP Size	 +  Shift + Right
 APC	 D.Menu / Top
 PIP Source	 +  Shift + Down
 ARC	 Setup / OPT /
 []	 Stop / Hold
 [≡i]	 Play / Slow
 [↑]	 >> / Tune+
 [≡?]	 Pause / Step / Freeze
 [⊖]	 I<< / Preset-
 [≡X]	 << / Tune-
 Sleep	 Sleep / Timer

Original	Replacement
 Reset	 Smart / List
 Power	 Power

