




 
 
 

 


 















 



 








 







 

 
 
 











Original	Replacement	Original	Replacement
 Power	 Power	 +10	 Guide
 Quick OSD	 Media	 Cancel	 Exit
 FL Select	 Smart	 Play Speed	 Red
 Open/Close	 Eject	 Dialogue	 Green
 Advanced	 TV/R	 Manual Skip	 Yellow
 Picture Mode	 Format	 Quick Replay	 List
 Repeat	 Text	 I<< Skip	 I<<
 1	 1	 Skip >>I	 >>I
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Top Menu	 Shift + Menu
 8	 8	 Menu	 Menu
 9	 9	 Functions	 D. Menu
 0	 0	 Return	 Back





	Original	Replacement	Original	Replacement
	Up			
	Down			
	Right			
	Left			
	Enter			
	Subtitle			
	Audio			
	Angle/Page			
	Play Mode	+		Shift + Play
	Setup			Options
	Transfer Mode			AV
	Zoom	+		Shift + Eject
	DNR			3D

