 



 



 











 



 
 





 


 
 
 

 
 
 

 
 
 



 







 
 



 



 


 



 

 





 
 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green
 Input TV	 TV/R	 Yellow	 Yellow
 Input Av	 AV	 Blue	 Blue
 Aspect	 Format	 Text	 Text
 Viera Link	 Smart	 STTL	 Subt
 Option	 Options	 Index	 Media
 Direct TV Rec	 Rec	 Hold	 Shift + Stop
 Guide	 Guide	 1	 1
 Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Left	 Left	 4	 4
 OK	 Ok	 5	 5
 Right	 Right	 6	 6
 Down	 Down	 7	 7
 Menu	 Menu	 8	 8
 Return	 Back	 9	 9
 Red	 Red	 0 / VCR	 0

 


 
 

 





 



 



 





Original		Replacement		Original		Replacement	
	Power DVD		Power				
	Rec DVD		Rec				
	Programme Down		Ch -				
	Programme Up		Ch +				
	I<< DVD		I<<				
	<< DVD		<<				
	>>I DVD		>>I				
	>> DVD		>>				
	Stop DVD		Stop				
	Pause/Step DVD		Pause				
	Play DVD		Play				





Original		Replacement		Original		Replacement	
	VCR Power		Power				
	VCR Rec		Rec				
	VCR		Ch -				
	VCR		Ch +				
	VCR << / I<<		<<				
	VCR << / I<<		I<<				
	VCR >> / >>I		>>				
	VCR >> / >>I		>>I				
	VCR Stop		Stop				
	VCR Pause / Step		Pause				
	VCR Play		Play				

