





 







 



 







 



 



 
 
 

 











 
 
 



















| Original | Replacement | Original | Replacement |
|---|--------------|---|-----------------------|
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Power |  | Power |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | TV/R |  | TV/Radio / |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | EPG |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | CH+ / Page+ |
|  | A/D |  | Sound / Title |
|  | (<>) L |  | Audio / Lang I/II |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol- |
|  | OK |  | OK |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | Menu / Setup |  | Menu / Home |
|  | Menu / Setup |  | Setup / OPT / |
|  | Down / CH- |  | Down |
|  | Down / CH- |  | CH- / Page- |
|  | Audio1 - |  | << / Tune- |
|  | Audio1 + |  | >> / Tune+ |
|  | Set / Info |  | Info / Angle |
|  | Next / ESC |  | Exit / Cancel / Clear |
|  | Audio2 - |  | I<< / Preset- |
|  | Audio2 + |  | >>I / Preset+ |
|  | Down |  | Smart / List |





| Original | Replacement | Original | Replacement |
|----------|---------------|----------|---------------------------|
| | Stop / Recall | | Stop / Hold |
| | Stop / Recall | | Back / Return |
| | A/B / ADR | | Yellow / YouTube / Repeat |
| | Memo | | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

