


 



 



 

 







 

 

 
 






 





 
 






 



 




 


 





 





Original		Replacement		Original		Replacement	
	Power DVD		Power		A-B/Repeat		Options
	Display		Info		Clear		Exit
	SYS Video		Back		FTS/Program		Sleep
	On/Off PBC		Media		Menu System		Menu
	1		1		Menu Disc		D. Menu
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Stop/Return		Stop
	8		8		Play		Play
	9		9		Pause		Pause
	0		0		>>		>>
	+10		Guide		<<		<<
	Title		Pre Ch		>		>>
	Repeat		Text		<		<<





Original		Replacement		Original		Replacement	
	FWD Slow		Ch +		Treble+		Shift + Ch +
	REV Slow		Ch -		Treble-		Shift + Ch -
	Subtitle		Subt				
	Angle		Format				
	Zoom		Eject				
	Audio		Dual				
	Search		TV/R				
	Preview		Green				
	Mode Sound		Yellow				
	3D Sound		3D				
	Power Speakers		Shift + Power				
	1-2-3 Input		AV				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Bass+		Shift + Up				
	Bass-		Shift + Down				

