 

 
 
 
 
 
 
 
 
 

 
 
 
 

 

 
 
 

 

 
 
 

 
 

 


 





 









 






 

 
 
 
 



 




Original	Replacement	Original	Replacement
	Power		Power
	P.Mode		Format
	S.Mode		Shift + Dual
	Mute		Mute
	Auto		Smart
	-/--		Shift + Guide
	Sleep		Sleep
	Display		Info
	Audio / Nicam		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Recall		Back
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	TV Menu		Menu
	Exit		Exit
	<< / Text		<<
	<< / Text		Text





Original	Replacement	Original	Replacement
 >> / Hold	 >>		
 Stop / Subpage	 Stop		
 Play/Pause /	 Play		
 Play/Pause /	 Pause		
 I<< / Index	 I<<		
 >>I / Size	 >>I		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Fav	 Pre Ch		
 Fav-	 +  Shift + Left		
 Fav+	 +  Shift + Right		
 TV / Radio	 TV/R		
 EPG	 Guide		
 Subtitle	 Subt		

