




 


 
 


 
 



 



 
 







 






 




 
 







 





 











 

 



 

 

 



 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Guide	 Guide
 3	 3	 Rec List	 List
 4	 4	 Source	 AV
 5	 5	 *	 Menu
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+] / [?]	 Info	 Left	 Left
 [≡]	 Text	 OK	 Ok
 Google Play	 Media	 Vol +	 Vol +
 Netflix	 Shift + Media	 Vol -	 Vol -
 Red	 Red	 Mute	 Mute
 Green	 Green	 Tv	 TV/R





Original	Replacement	Original	Replacement
	Recall		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	[...]		Subt
	Help		Options
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Exit		Exit

