







| Original  | Replacement  | Original   | Replacement   |
|---|--|--|---|
|  Power     |  Power              |  CH+            |  CH+ / Page+                 |
|  Mute      |  Mute / Dimmer      |  Vol-           |  Vol-                        |
|  1         |  1                  |  Source         |  AV / Input / RDS            |
|  2         |  2                  |  CH-            |  CH- / Page-                 |
|  3         |  3                  |  Up             |  Up                          |
|  4         |  4                  |  Left           |  Left                        |
|  5         |  5                  |  OK             |  OK                          |
|  6         |  6                  |  Right          |  Right                       |
|  7         |  7                  |  Exit           |  Exit / Cancel / Clear       |
|  8        |  8                 |  Down          |  Down                       |
|  9       |  9                |  Menu         |  Menu / Home               |
|  PR List |  Smart / List     |  Aspect       |  Shift + Picture / Format  |
|  0       |  0                |  Sleep        |  Sleep / Timer             |
|  Recall  |  Back / Return    |  Info/Display |  Info / Angle              |
|  Vol+    |  Vol+             |  I/II/Nicam   |  Shift + Audio / Lang I/II |
|  P.Mode  |  Picture / Format |  DVD/USB      |  Shift + 2                 |
|  S.Mode  |  Sound / Title    |  Text         |  Text / Goto               |



