

 
 


 
 


 



 
 
 

 
 


 
 


 
 


 




 

 


 

 


 






 



 



 
 




 
 



 
 
 

 


 


 


 
 
 




| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| On/Off |  Power | Menu Right |  Right |
| Mute |  Mute | Menu Off |  Exit |
| Update |  Media | Menu Down |  Down |
| Reveal |  Smart | Back |  Back |
| Txt Stop |  Stop | Volume+ |  Vol + |
| Subt.List |  Subt | Chan.Up |  Ch + |
| Sleep Timer |  Sleep | Volume- |  Vol - |
| Return TV |  TV/R | Menu audio |  Dual |
| Menu video |  D. Menu | Chan.Down |  Ch - |
| Text |  Text | 1 |  1 |
| Txt Expand |  Eject | 2 |  2 |
| TV/AV |  AV | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | 5 |  5 |
| Display |  Info | 6 |  6 |
| Menu Left |  Left | 7 |  7 |
| OK Enter |  Ok | 8 |  8 |



| Original | Replacement | Original | Replacement |
|--------------|---|------------|---|
| On/Off |  Power | OK Enter |  Ok |
| Audio Off |  Mute | Return |  Back |
| Slow Down |  I<< | Menu Right |  Right |
| Subt. |  Subt | Menu Down |  Down |
| Auto/Track |  Green | Volume+ |  Vol + |
| Slow Up |  >>I | Progr. |  Sleep |
| Rep/A-B |  +  Shift + Text | Next |  Ch + |
| Stop |  Stop | Volume- |  Vol - |
| Title |  List | Top Menu |  D. Menu |
| Zoom |  +  Shift + Eject | Prev. |  Ch - |
| Repeat/1/All |  Text | 1 |  1 |
| Pause |  Pause | 2 |  2 |
| DVD/TV |  AV | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | 5 |  5 |
| Display |  Info | 6 |  6 |
| Menu Left |  Left | 7 |  7 |



| Original | Replacement | Original | Replacement |
|-------------|--|----------|---|
| 8 |  8 | Setup |  Options |
| 9 |  9 | 3D |  3D |
| +10 |  Guide | | |
| EQ |  Media | | |
| 0 |  0 | | |
| C/CH |  Pre Ch | | |
| Digest |  Red | | |
| Record |  Rec | | |
| Open/Close |  Eject | | |
| Mode |  Smart | | |
| Angle |  TV/R | | |
| Rewind |  << | | |
| Play |  Play | | |
| Clear/00:00 |  Exit | | |
| Audio |  Dual | | |
| F.Forward |  >> | | |
| NTSC/PAL |  Format | | |

