



| Original  | Replacement   |
|---|---|
|  Standby/On    |  Power     |
|  STB           |  Green     |
|  VCR           |  Yellow    |
|  DVD           |  Blue      |
|  AUX           |  Red       |
|  TV            |  TV/R      |
|  Vol Mode      |  Dual      |
|  Auto Setup    |  Media     |
|  Input Mode    |  AV        |
|  Sleep         |  Sleep     |
|  1/5Beam      |  1        |
|  2/ST+3Beam  |  2       |
|  3/3Beam     |  3       |
|  4/Stereo    |  4       |
|  5/My Beam   |  5       |
|  6/My Sur.   |  6       |
|  Sur. Decode |  Options |

| Original   | Replacement  |
|--|--|
|  CH Level |  Smart  |
|  Menu     |  Menu   |
|  Return   |  Back   |
|  Test     |  Pre Ch |
|  Up       |  Up     |
|  Down     |  Down   |
|  Right    |  Right  |
|  Left     |  Left   |
|  Enter    |  Ok     |
|  Vol+     |  Vol +  |
|  Vol-     |  Vol -  |
|  Mute   |  Mute |





| Original  | Replacement   |
|---|---|
|  Power Tv    |  Power   |
|  STB         |  Green   |
|  VCR         |  Yellow  |
|  DVD         |  Blue    |
|  AUX         |  Red     |
|  TV          |  TV/R    |
|  Input 1 Tv  |  Text    |
|  Input 2 Tv  |  Eject   |
|  Vol. Mode   |  Dual    |
|  Auto Setup  |  Media   |
|  Input Mode |  Format |
|  Sleep     |  Sleep |
|  1         |  1     |
|  2         |  2     |
|  3         |  3     |
|  4         |  4     |
|  5         |  5     |

| Original   | Replacement   |
|--|---|
|  6          |  6       |
|  7          |  7       |
|  8          |  8       |
|  9          |  9       |
|  0          |  0       |
|  +10        |  Guide   |
|  Sur.Decode |  Options |
|  CH Level   |  Smart   |
|  Menu       |  Menu    |
|  Return     |  Back    |
|  Test       |  Pre Ch  |
|  Up       |  Up    |
|  Down     |  Down  |
|  Right    |  Right |
|  Left     |  Left  |
|  Enter    |  Ok    |
|  CH+      |  Ch +  |





| Original |          | Replacement |       | Original | Replacement |
|----------|----------|-------------|-------|----------|-------------|
|          | CH-      |             | Ch -  |          |             |
|          | Tv Input |             | AV    |          |             |
|          | Tv Vol+  |             | Vol + |          |             |
|          | Tv Vol-  |             | Vol - |          |             |
|          | Tv Mute  |             | Mute  |          |             |
|          | <<       |             | <<    |          |             |
|          | Stop     |             | Stop  |          |             |
|          | >>       |             | >>    |          |             |
|          | l<<      |             | l<<   |          |             |
|          | Pause    |             | Pause |          |             |
|          | >>l      |             | >>l   |          |             |
|          | Play     |             | Play  |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |
|          |          |             |       |          |             |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
| Power    | Power       |          |             |
| Vol+     | Vol +       |          |             |
| Vol-     | Vol -       |          |             |
| Mute     | Mute        |          |             |
| STB      | Green       |          |             |
| VCR      | Yellow      |          |             |
| DVD      | Blue        |          |             |
| AUX      | Red         |          |             |
| TV       | TV/R        |          |             |
| <<       | <<          |          |             |
| Stop     | Stop        |          |             |
| >>       | >>          |          |             |
| I<<      | I<<         |          |             |
| Pause    | Pause       |          |             |
| >>I      | >>I         |          |             |
| Play     | Play        |          |             |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
| Power AV | Power       |          |             |
| Vol+     | Vol +       |          |             |
| Vol-     | Vol -       |          |             |
| Mute     | Mute        |          |             |
| STB      | Green       |          |             |
| AUX      | Red         |          |             |
| VCR      | Yellow      |          |             |
| DVD      | Blue        |          |             |
| TV       | TV/R        |          |             |
| <<       | <<          |          |             |
| Stop     | Stop        |          |             |
| >>       | >>          |          |             |
| Pause    | Pause       |          |             |
| Play     | Play        |          |             |
|          |             |          |             |
|          |             |          |             |
|          |             |          |             |
|          |             |          |             |

