
 









Original	Replacement
 Standby	 Power
 Eject	 Eject
 Audio Out	 Dual
 Display	 Info
 Timer On/Off	 Sleep
 Timer On/Off	 Shift + AV
 Mode OSD	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Set	 Options
 Clear	 Exit
 SV/V+/Timer	 3D
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Zero Back	 Blue
 Skip Search	 Yellow
 Super P.	 Red
 Lock	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/AM/PM	 Guide







