






 





























































 










 

























Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	(↔)		Audio / Lang I/II
	TV		TV/Radio /
	∨		Sound / Title
	[#]→		Picture / Format
	[.≡]		Text / Goto
	[≡+]		Shift + Stop /
	[≡◆]		Shift + Zoom /
	[≡x]⊙		Back / Return
	[≡?][+]		Sleep / Timer
	1		1
	2		2
	3		3
	[≡i]		Info / Angle
	4		4
	5		5
	6		6
	A/B		Shift + Yellow / YouTube /
	7		7
	8		8
	9		9
	Output		AV / Input / RDS
	-/--		Guide / EPG / -/--
	0		0
	C		Exit / Cancel / Clear
	IN 123		D.Menu / Top
	1-/TP Off		Fav / Marker / PC
	C00		Setup / OPT /
	2-/TP On		Shift + Fav / Marker / PC
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-





Original	Replacement
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Left
	 Right
	 Zoom / Size
	 Menu / Home
	 Smart / List
	 OK
	 Up
	 Subtitle / EQ
	 >>I / Preset+
	 Shift + Right
	 Down
	 Shift + CH+ /

Original	Replacement
	 I<< / Preset-
	 Shift + Left
	 Shift + Power
	 Shift + CH- /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
Power Down	Power		
Prog+ Down	CH+ / Page+		
Prog- Down	CH- / Page-		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Rec	Rec / Rec Mode		
>>	>> / Tune+		
Play	Play / Slow		
<<	<< / Tune-		





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 <<	 << / Tune-		

Original	Replacement	Original	Replacement





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

