
 
 









 






 




 

 









Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Shift + Sleep
Stop	 Stop	Volume+	 Vol +
Pause	 Pause	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Auto/Track	 Sleep	Top Menu	 D. Menu
Rep/A-B	 Shift + Text	Prev.	  <<
Title	 List	1	 1
Repeat/1/All	 Text	2	 2
Zoom	 Shift + Eject	3	 3
DVD/TV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8



Original	Replacement	Original	Replacement
9	 9	3D	 3D
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
Record	 Rec		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Pbc	 Media		
Audio	 Dual		
Shuffle	 TV/R		
Mark	 +  Shift + 7		
Setup	 Options		
Open/Close	 Eject		
Digest	 Smart		
Angle	 Format		
Clear/00:00	 Exit		

