
 















 

 

 

 












Original	Replacement
 Power	 Power
 SD	 Smart
 [+]	 Info
 Tv/AV	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv/Text	 Text
 F.P.	 Eject

Original	Replacement
 Index	 List
 Hold	 Options
 N	 Media
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9












 





 
 
 


Original	Replacement
0	0
-/--	Guide
C	Pre Ch
Aspect	3D
(↔)	Format
Multiwindow	D. Menu
Direct Tv Rec	TV/R
Power VCR	Shift + Power
Rec VCR	Rec
Programme Up	Shift + Ch +
Programme Down	Shift + Ch -
<< VCR	<<
>> VCR	>>
Stop VCR	Stop
Pause/Step VCR	Pause
Play VCR	Play

Original	Replacement





Original	Replacement	Original	Replacement
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Up	 Ch +		
 Programme Down	 Ch -		
 << DVD	 <<		
 >> DVD	 >>		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		

