













 




































| Original | Replacement | Original | Replacement |
|------------|---|--------------|---|
| Audio Off |  Mute / Dimmer | Rep/A-B |  Yellow / YouTube / Repeat |
| Game |  Blue / Prime Video / Random | Rewind |  << / Tune- |
| Pbc |  AV / Input / RDS | Repeat/1/All |  Green / APP / Repeat |
| Digest |  Text / Goto | Prev. |  I<< / Preset- |
| C/CH |  Sleep / Timer | F.Forward |  >> / Tune+ |
| Auto/Track |  Picture / Format | 3 |  3 |
| DVD/TV |  Smart / List | 4 |  4 |
| 3D |  +  Shift + 3 | 5 |  5 |
| Menu Down |  Down | 6 |  6 |
| Slow Down |  CH- / Page- | 7 |  7 |
| Slow Up |  CH+ / Page+ | 8 |  8 |
| OK Enter |  OK | 9 |  9 |
| Menu Up |  Up | +10 |  Guide / EPG / -/-- |
| Progr. |  TV/Radio / | 0 |  0 |
| Menu Right |  Right | 1 |  1 |
| 2 |  2 | Angle |  Info / Angle |
| Menu Left |  Left | Play |  Play / Slow |



| Original | Replacement | Original | Replacement |
|------------|---|----------|-------------|
| Record |  Rec / Rec Mode | | |
| Audio |  Audio / Lang I/II | | |
| Setup |  Setup / OPT / | | |
| Mark |  Fav / Marker / PC | | |
| Open/Close |  Eject / Surround | | |
| Menu |  Menu / Home | | |
| Stop |  Stop / Hold | | |
| Pause |  Pause / Step / Freeze | | |
| Subt. |  Subtitle / EQ | | |
| Title |  Sound / Title | | |
| Zoom |  Zoom / Size | | |
| On/Off |  Power | | |
| Display |  Display / Media | | |
| Return |  Back / Return | | |
| Next |  >>I / Preset+ | | |
| Top Menu |  D.Menu / Top | | |
| | | | |

