
 

 

 

 

 

 









 








 
 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Timer	 AV
 EPI	 Guide
 SUBTL	 Subt
 Audio	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 16:9	 Format
 Lang	 Dual
 RCL	 Back
 FAV	 Pre Ch
 Page+ / Timeshift	 Shift + Ch +
 Page- / V-Format	 Shift + Ch -
 Page- / V-Format	 Shift + Format
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu





Original	Replacement
 Info	 Info
 TXT	 Text
 Exit	 Exit
 Red / SAT	 Red
 Green / Zoom	 Green
 Green / Zoom	 Eject
 Yellow / Pause	 Yellow
 Yellow / Pause	 Shift + Pause
 Blue / TV/Radio	 Blue
 Blue / TV/Radio	 TV/R
 <<<	 <<<
 >>>	 >>>
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 I<<<	 I<<<
 >>>I	 >>>I

Original	Replacement
 Slow	 Shift + Play
 Rec	 Rec
 Media	 Media
 Game	 Smart
 PVR	 Shift + Smart
 HDD	 Shift + Media

