


 

 
 
 

 



 
 
 
 
 

 



 

 

 





 
 









Original	Replacement
 Power	 Power
 ShowView	 3D
 AV	 AV
 Direct Tv Rec	 TV/R
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 /--	 Guide
 Cancel	 Exit

Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 HDD	 Media
 DVD	 Smart
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu / Direct Navigator	 D. Menu
 Menu / Play List	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right











 


 
 
 


 










 


 







Original	Replacement
 Down	 Down
 Functions	 Options
 Return	 Back
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Display	 Info
 Time Slip	 Text
 Dubbing	 Subt
 Rec Mode	 Shift + Rec
 I<< Skip	 I<<
 Skip >>I	 >>I
 A/Input Select	 Eject
 B/Status	 List
 C/AV Link	 Yellow
 D/Manual Skip	 Format
 Erase	 Dual
 Audio	 Shift + Dual

Original	Replacement
 Position	 Green
 Marker	 Pre Ch





	Original	Replacement		Replacement
	Power		Power	Power
	CH+		Ch +	Ch +
	CH-		Ch -	Ch -
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	-/--		Guide	Guide
	A		Red	Red
	B		Green	Green
	C		Yellow	Yellow

	Original	Replacement		Replacement
	D		Blue	Blue

