



Original	Replacement
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Original	Replacement
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >>I / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





Original		Replacement	
	Subtitle		Subtitle / EQ
	Volume-		Vol-
	Zoom		Zoom / Size
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Display		Display / Media
	Setup		Setup / OPT /
	Stop		Stop / Hold
	Pause / Step		Pause / Step / Freeze
	Play		Play / Slow
	<< / Slow Scan-		<< / Tune-
	>> / Slow		>> / Tune+

Original		Replacement	
	I<< / Skip Scan-		I<< / Preset-
	>>I / Skip Scan+		>>I / Preset+
	Title		Shift + Sound / Title
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Angle		Info / Angle

