



Original	Replacement
Standby	Power
Open / Close	Eject / Surround
Play Mode	Picture / Format
Timer	Sleep / Timer
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Watch TV	Smart / List
Up	Up
Left	Left
Select	OK
Right	Right

Original	Replacement
Down	Down
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Program+	CH+ / Page+
Rec. Mode	Shift + Rec / Rec Mode
TV / DVD	TV/Radio /
Program-	CH- / Page-
Record	Rec / Rec Mode
Insert Chapter	D.Menu / Top
Subtitle	Subtitle / EQ
Video Source	AV / Input / RDS
Audio	Audio / Lang I/II





	Original	Replacement	Original	Replacement
	ANGLE	ANGLE		
	Angle	Info / Angle		
	SEARCH MODE	NETFLIX		
	Search Mode	Red / Netflix / Search		
	1	TV		
	1	1		
	2	DVD		
	2	2		
	3	CD - STB		
	3	3		
	CLEAR	CLEAR		
	Clear	Exit / Cancel / Clear		
	4	VIDEO		
	4	4		
	5	TAPE		
	5	5		
	6	TUNER		
	6	6		
	7	AUX - HDD		
	7	7		
	8	USB		
	8	8		
	9	BLUETOOTH		
	9	9		
	0	HDMI - SAT		
	0	0		

