




 



































 







 







 

 




 
 
 







 


















 







Original	Replacement	Original	Replacement
	Power		Power
	[ + ]		Info
	Tv/AV		AV
	Mute		Mute
	^		Ch +
	v		Ch -
	Vol+		Vol +
	Vol-		Vol -
	V		Ok
	V+		Right
	V-		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Timer		Shift + AV
	N		Media
	Menu		Menu
	Mood Light		Format
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Power VCR		Shift + Power
	Audio Out VCR		Dual
	^ VCR		Up
	v VCR		Down





Original	Replacement	Original	Replacement
	Stop		[≡⇕] Exit
	Pause		[∴] Subt
	>		Back
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Tv/TXT		Text
	F.P.		Pre Ch
	[ /≡]		Options
	[≡ <]		Eject
	[≡?]		TV/R
	[≡◇]		3D
	[≡i]		List
	[≡+]		D. Menu
	[≡o]		Smart
	[≡x]		Sleep

